 


## Instruction for use

---

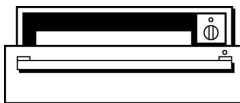

N7140.0/1/GB

N7290.0/1/GB

---

en

# Table of contents

<b>Important information</b> .....	<b>3</b>
Before installation .....	3
Safety precautions .....	4
<b>The warming drawer</b> .....	<b>5</b>
<b>Preheating ovenware</b> .....	<b>6</b>
General ovenware .....	6
Drinks containers .....	6
Method .....	7
<b>Keeping food warm</b> .....	<b>8</b>
Method .....	8
<b>Uses</b> .....	<b>9</b>
Slow cooking .....	10
<b>Cleaning and caring for your warming drawer</b> .	<b>12</b>
Warming drawer exterior .....	12
Heating plate .....	12
Warming drawer interior .....	13
<b>Troubleshooting</b> .....	<b>15</b>
<b>After-sales service</b> .....	<b>16</b>
Technical data .....	16

---

# Important information

Read this instruction manual carefully. This will enable you to operate your appliance safely.

Please keep the instruction and installation manual in a safe place. Please pass on the instruction manual to the new owner if you sell the appliance.

---

## Before installation

### Transport damage

This appliance is intended only for domestic use.

Please observe the installation manual enclosed.

Check the appliance after unpacking it. Do not connect the appliance if it has been damaged in transport.

### Electrical connection

The appliance is fitted with a plug and must only be connected to a properly installed earthed socket. The mains voltage must correspond to the voltage specified on the rating plate.

The sockets must only be installed and the connecting cable replaced by a qualified electrician. If the plug is no longer accessible following installation, an all pin disconnecting device must be present on the installation side with a contact gap of at least 3 mm.

Adapters, multiway strips and extension leads must not be used. Overloading can result in a risk of fire.

---

## Safety precautions

Use the appliance only for warming meals and ovenware.

Children must only be allowed to use the appliance if they have been properly instructed. They must be able to operate the appliance correctly and understand the risks outlined in this instruction manual.

This product is not designed for use by small children or the infirm without supervision.

### Hot surface

The heating plate in the warming drawer becomes very hot. There is a risk of burning.

Children must be kept at a safe distance from the appliance. Always use oven gloves or an oven cloth when removing ovenware.

Do not store flammable objects or plastic containers in the warming drawer. Risk of fire.

### Cleaning

Do not use a steam jet cleaner to clean the drawer. There is a risk of short-circuiting.

### Repairs

Incorrect repairs are dangerous. There is a risk of electrocution.

Repairs may only be carried out by after-sales service technicians.

### Chips in the heating plate

There is a danger of electrocution if there are breaks, chips or cracks in the heating plate.

Pull out the plug or switch off the circuit breaker for the drawer in the fuse box.


Contact the after-sales service.

# The warming drawer

You can use the warming drawer to preheat ovenware or to keep food warm.

## “Power on” indicator light

The indicator light flashes when you switch on the appliance. It lights up when the drawer is closed.

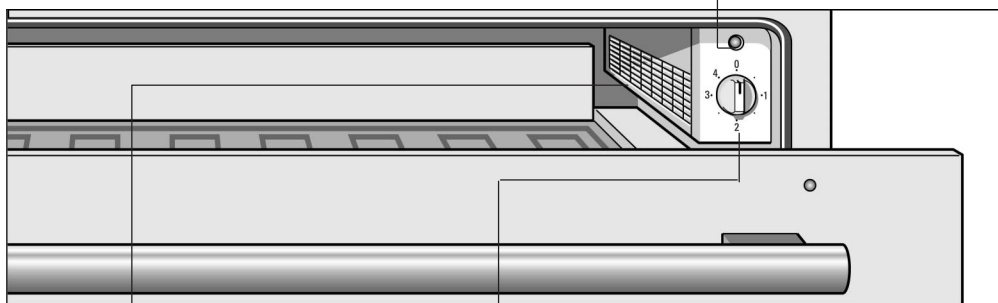

## Fan and heater

run when the **4** preheat ovenware setting is selected.

## Function selector

The following settings are available:

- 0** = Off
- 1** = Proving yeast pastry, defrosting
- 2** = Keeping bread warm, defrosting, preheating drinks containers
- 3** = Keeping food warm
- 4** = Preheating ovenware

The appliance will only heat up if the drawer is closed correctly.

---

# Preheating ovenware

Food stays warm for longer in preheated ovenware.  
Drinks also remain warm for longer.

---

## General ovenware

Only load the warming drawer up to 25 kg. You can preheat dinnerware for 6 or 12 people, for example.

<b>Low drawer,</b> 14 cm in height		<b>Tall drawer,</b> 29 cm in height	
6 dinner plates	Ø 24 cm	12 dinner plates	Ø 24 cm
6 soup bowls	Ø 10 cm	12 soup bowls	Ø 10 cm
1 serving dish	Ø 19 cm	1 serving dish	Ø 22 cm
1 serving dish	Ø 17 cm	1 serving dish	Ø 19 cm
1 meat plate	32 cm	1 serving dish	Ø 17 cm
		2 meat plates	32 cm

## Arranging ovenware

As far as possible, distribute the ovenware over the entire surface. It takes longer to warm through tall stacks of plates than individual pieces of ovenware, e.g. 2 serving dishes.

---

## Drinks containers

Always heat drinks containers, e.g. espresso cups, using setting 2.



At setting 3 or 4, the drinks containers will get very hot. There is a risk of burning.

---

## Method

1. Place the ovenware in the drawer.
2. Set the function selector to setting 4.  
Always heat drinks containers using setting 2.  
The "power on" indicator light flashes.
3. Close the warming drawer.  
The "power on" indicator light lights up. The appliance heats up.

### How long does preheating take?

The length of time required for preheating depends on the material the ovenware is made of and its thickness, as well as the quantity, height and arrangement of the ovenware.

As far as possible, distribute the ovenware over the entire surface.

It takes approximately 15-25 minutes to preheat dinnerware for 6 people.

### Switching off

Open the drawer. Switch off the function selector.

### Removing ovenware

Remove ovenware from the drawer using oven gloves or an oven cloth.



The upper surface of the heating plate will be hot. The base of the ovenware will be hotter than the top.

---

# Keeping food warm

Do not place hot saucepans or pans on the glass surface of the warming drawer immediately after removing them from the hot hob. This could damage the glass surface.

Do not fill the ovenware to such an extent that food spills over.

Cover the food with a heat-resistant lid or aluminium foil.

It is recommended that you do not keep food warm for longer than an hour.

## Suitable foods

The appliance is suitable for keeping meat, poultry, fish, sauces, vegetables, side dishes and soups warm.

---

## Method

1. Place the ovenware in the drawer
2. Set the function selector to setting 3 and preheat the appliance for 10 minutes.
3. Add the food to the preheated ovenware.
4. Close the drawer again.  
The "power on" indicator light lights up. The appliance heats up.

## Switching off

Switch off the function selector.  
Remove the food from the drawer using oven gloves or an oven cloth.

# Uses

The table shows various uses for the warming drawer.  
Set the function selector to the desired setting.  
Preheat the ovenware as indicated in the table.

Level	Food / ovenware	Note
1	Delicate deep-frozen food e.g. cream cakes, butter, sausages, cheese	Defrost
1	Leaving yeast dough to rise	Cover
2	Deep-frozen food e.g. meat, cakes, bread	Defrost
2	Keeping eggs warm e.g. hard-boiled eggs, scrambled eggs	Preheat ovenware, cover food
2	Keeping bread warm e.g. toast, bread rolls	Preheat ovenware, cover food
2	Preheating drinks containers	e.g. espresso cups
2	Delicate food e.g. slow-cooked meat	Cover ovenware
3	Keeping food warm	Preheat ovenware, cover food
3	Keeping drinks warm	Preheat ovenware, cover drinks
3	Warming flat dough-based foods e.g. pancakes, wraps, tacos	Preheat ovenware, cover food
3	Warming dry cakes e.g. crumble cakes, muffins	Preheat ovenware, cover food
3	Melting cooking chocolate or chocolate coating	Preheat ovenware, break up food into small pieces
3	Dissolving gelatine	Open, approximately 20 minutes
4	Preheating ovenware	Not suitable for drinks containers

---

## Slow cooking

Slow cooking is the ideal cooking method for all tender pieces of meat which are to be cooked rare or very rare. The meat remains very juicy and turns out as soft as butter. Advantage: this gives you flexibility when planning meals, since the cooking times for slow cooking are generally longer. Slow-cooked meat can be kept warm easily.

### Suitable ovenware

Use ovenware made out of glass, porcelain or ceramic and with a lid, e.g. a glass roasting dish.

### Method

1. Preheat the warming drawer containing the ovenware at setting 4.
2. Rapidly heat a little fat in a pan. Sear the meat over a high heat and then place it directly in the warmed ovenware. Place the lid on top.
3. Put the ovenware with the meat back in the warming drawer and complete the cooking. Set the function selector to setting 3.

### Notes on slow cooking

Only use high-quality, fresh meat for this. Carefully remove sinews and fat. Fat develops a strong, distinct taste during slow cooking.

The meat should not be turned even if it is a large joint.

You can cut the meat immediately after slow cooking. It is not necessary to leave the meat to stand.

This particular cooking method always leaves the inside of the meat medium rare. However, this does not mean that it is raw or not properly cooked.

Meat that has been slow-cooked is not as hot as meat that has been cooked conventionally. Serve the sauce very hot. Place the plates in the warming drawer for the last 20-30 minutes.

Turn the oven back to setting 2 after slow cooking in order to keep the slow-cooked meat warm. You can keep small pieces of meat warm for up to 45 minutes, and large pieces for up to two hours.

**Table**

All tender joints of beef, pork, veal, lamb, game and poultry are suitable for slow cooking. Searing and braising times depend on the size of the piece of meat.

The times for searing refer to the meat being placed in hot fat.

<b>Meal</b>	<b>Searing on the hotplate</b>	<b>Completing in the oven</b>
<b>Small pieces of meat</b>		
Cubes or strips	1-2 minutes all over	20-30 minutes
Small cutlets, steaks or médaillons	1-2 minutes per side	35-50 minutes
<b>Medium-sized pieces of meat</b>		
Fillet (400-800 g)	4-5 minutes all over	75-120 minutes
Saddle of lamb (approx. 450 g)	2-3 minutes per side	50-60 minutes
Lean joint (600-1000 g)	10-15 minutes all over	120-180 minutes
<b>Large pieces of meat</b>		
Fillet (from 900 g)	6-8 minutes all over	120-180 minutes
Roast beef (1.1-2 kg)	8-10 minutes all over	210-300 minutes

---

# Cleaning and caring for your warming drawer

Do not use high-pressure cleaners or steam jets.

Only clean the oven when it is switched off.

Function selector: Setting = 0

---

## Warming drawer exterior

Wipe the appliance with water and a little detergent. Dry it with a soft cloth.

Caustic or abrasive substances are not suitable. If any such substance comes into contact with the front of the warming drawer, wipe it off immediately with water.

## Stainless steel surfaces

Always remove any flecks of limescale, grease, cornflour or egg white immediately. Corrosion can form under such flecks.

For cleaning, use water with a little detergent. Dry the surface with a soft cloth.

## Appliances with an aluminium front

Use a mild window-cleaning detergent and a soft window cloth or a fluff-free micro-fibre cloth. Wipe the surface using a horizontal motion and do not apply pressure.

Do not use aggressive cleaning products, abrasive sponges or harsh cleaning cloths.

---

## Heating plate


Clean the heating plate using water and a little detergent.

## Warming drawer interior

### Removal

The drawer can be removed if the appliance requires cleaning on the inside.

1. Remove the drawer completely.
2. Undo the two rear screws.  
Loosen the two front screws halfway.
3. Take hold of the front of the drawer on both sides.  
The rear section of the guide rails has been lubricated.
4. Carefully remove the drawer in an upwards direction and set it down.

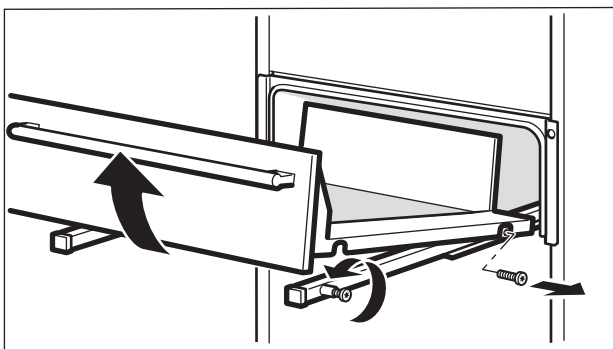

The appliance can now be cleaned on the inside with water and detergent.




Do not immerse the drawer in water once it has been removed.

### Installation

Proceed in the reverse order of removal to refit the warming drawer.

To do this, position the drawer on the rails. Pull the left and right rails forward until the screws sit in the recess.

Tighten the screws.

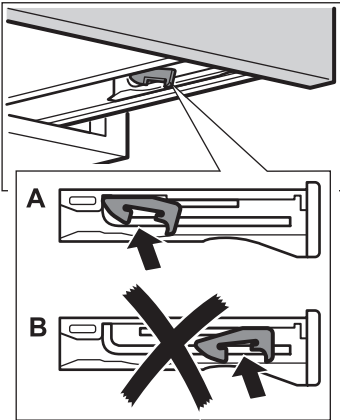

Please bear the following in mind:

There is a tensioning hook under the warming drawer on both the left-hand and right-hand sides.

The drawer can only be opened if the tensioning hook is in the correct position.

If a hook has slipped out of the guide rail (illustration B), you will need to force it backwards until it snaps into position (illustration A).

---

# Troubleshooting

Malfunctions often have simple explanations. Please read the following instructions before calling the after-sales service:

**The ovenware or food remain cold**

Check whether

- the appliance is switched on
- there has been a power cut
- the drawer is closed completely.

**The ovenware or food are not warmed sufficiently**

This may indicate that

- the ovenware or food were not warmed for a sufficient length of time
- the drawer was left open for a long time.

**The "power on" indicator light flashes**

Check whether the drawer is closed. If it cannot be closed, check the position of the tensioning hooks as described under "Installation" in the "Cleaning and caring for your warming drawer" section.

**The drawer does not close properly**

Check the position of the tensioning hooks as described under "Installation" in the "Cleaning and caring for your warming drawer" section.

**The indicator light flashes rapidly when the warming drawer is closed**

Call the after-sales service

**The "power on" indicator light does not light up**

The indicator light is faulty.  
Consult the after-sales service

**The fuse in the fuse box has blown**

Disconnect the appliance at the mains and consult the after-sales service.

Repairs must only be carried out by qualified specialists. Incorrect repairs may result in serious injury to the user.

---

# After-sales service

Our after-sales service is there for you if your oven should need to be repaired. You will find the address and telephone number of your nearest after-sales service centre in the phone book. The after-sales service centres listed will also be happy to advise you of a service point in your local area.

## E number and FD number

When contacting the after-sales service, always specify the product number (E no.) and the production number (FD no.) of your appliance. The rating plate bearing these numbers can be found by opening the warming drawer. Make a note of these numbers in the space below to save time in the event of your appliance malfunctioning.

E no.	FD no.
-------	--------

After-sales service 
---

---

## Technical data

Power supply:	230 V, 50 Hz
Total connected load:	810 W
VDE-inspected:	Yes
CE mark:	Yes